




# B PANEL 180TW

## DMX Chart



### 4 DMX modes

- 2-Channel mode
- 3-Channel mode
- 6-Channel mode
- 8-Channel mode

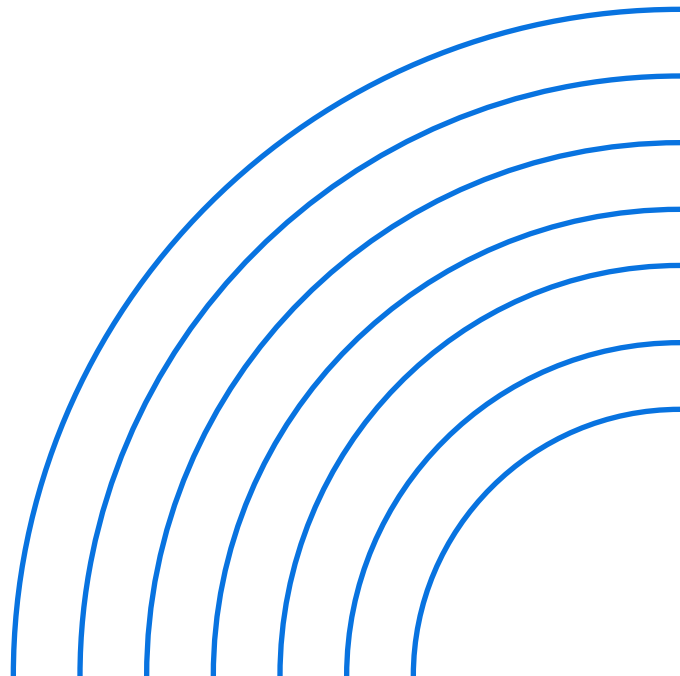

## 2-channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Coarse Dimmer	0	255
2	Strobe	Flash to Burst	0	255

## 3-channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Coarse Dimmer	0	255
2	Dimmer	Dimmer Fine	0	255
3	CCT	2700K-6000K	0	255

## 6-channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Coarse Dimmer	0	255
2	Dimmer	Dimmer Fine	0	255
3	CCT	2700K-6000K	0	255
4	Strobe	Flash to burst	0	255
5	Frequency	1000 Hz	0	28
		2500 Hz	29	57
		2800 Hz	58	86
		3300 Hz	87	114
		4000 Hz	115	144
		5000 Hz	145	173
		6600 Hz	174	201
		10000 Hz	202	231
		20000 Hz	231	255
6	Dimmer Curve	Inv. Square law	0	63
		Linear	64	127
		Square Law	128	191
		S Curve	192	255

## 8-channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Coarse Dimmer	0	255
2	Dimmer	Dimmer Fine	0	255
3	CCT	2700K-6000K	0	255
4	Strobe	Flash to burst	0	255
5	Frequency	1000 Hz	0	28
		2500 Hz	29	57
		2800 Hz	58	86
		3300 Hz	87	114
		4000 Hz	115	144
		5000 Hz	145	173
		6600 Hz	174	201
		10000 Hz	202	231
		20000 Hz	231	255
6	Dimmer Curve	Inv. Square law	0	63
		Linear	64	127
		Square Law	128	191
		S Curve	192	255
7	Dimmer	CW	0	255
8	Dimmer	WW	0	255