




B PAR360Z DMX Chart



4 DMX modes

- 5-Channel mode
- 8-Channel mode
- 12-Channel mode
- 17-Channel mode

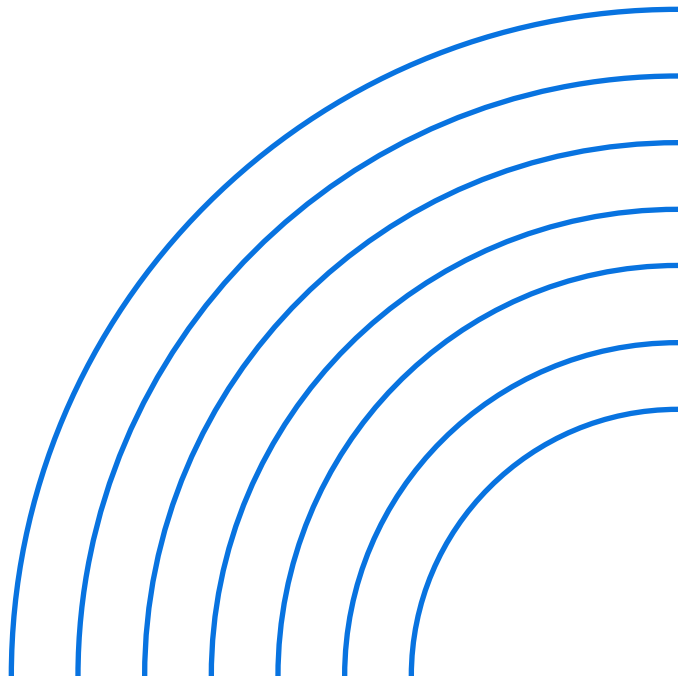

5-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Red	Red 0-100%	0	255
2	Green	Green 0-100%	0	255
3	Blue	Blue 0-100%	0	255
4	White	White 0-100%	0	255
5	Zoom	Zoom 0-100%	0	255

8-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Dimmer 0-100%	0	255
2	Red	Red 0-100%	0	255
3	Green	Green 0-100%	0	255
4	Blue	Blue 0-100%	0	255
5	White	White 0-100%	0	255
6	CCT	NO CCT	0	24
		2500K	25	44
		3000K	45	65
		3500K	66	86
		4000K	87	107
		4500K	108	128
		5000K	129	149
		6000K	150	170
		7000K	171	191
		8000K	192	212
		9000K	213	233
		10000K	234	255
7	Strobe	Strobe 0-100%	0	255
8	Zoom	Zoom 0-100%	0	255

12-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Dimmer 0-100%	0	255
2	Red	Red 0-100%	0	255
3	Green	Green 0-100%	0	255
4	Blue	Blue 0-100%	0	255
5	White	White 0-100%	0	255
6	CCT	NO CCT	0	24
		2500K	25	44
		3000K	45	65
		3500K	66	86
		4000K	87	107
		4500K	108	128
		5000K	129	149
		6000K	150	170
		7000K	171	191
		8000K	192	212
		9000K	213	233
		10000K	234	255
7	Colour Macro	Colour OFF	0	19
		Red	20	23
		Green	24	27
		Blue	28	31
		Yellow	32	35
		Cyan	36	39
		Magenta	40	43
		White	44	47
		Orange	48	51
		Pink	52	55

12-Channel mode

Channel	Name	Function	Min DMX	Max DMX
7	Colour Macro	Violet	56	59
		Aquamarine	60	63
		Sky Blue	64	67
		Full White	68	71
		Cool White	72	75
		Warm White	76	79
		White 3200K	80	83
		White 2500K	84	87
		Yellow 2	88	91
		Straw	92	95
		Orange 2	96	99
		Light Rose	100	103
		Dark Pink	104	107
		Magenta 2	108	111
		Blue 2	112	115
		Med Blue Green	116	119
		Dark Blue	120	123
		Bright Pink	124	127
		Medium Blue	128	131
		Golden Amber	132	135
		Deep Golden Amber	136	139
		Pale Lavender	140	143
		Apricot	144	147
		Dark Lavender	148	151
		Chocolate	152	155
		Just Blue	156	159
		Surprise Pink	160	163
		Scarlet	164	167

12-Channel mode

Channel	Name	Function	Min DMX	Max DMX
7	Colour Macro	Surprise Peach	168	171
		Fire	172	175
		English Rose	176	179
		Mauve	180	183
		Bright Blue	184	187
		Alice Blue	188	191
		Rose Indigo	192	195
		Urban Blue	196	199
		Cool Blue	200	203
		Light Salmon	204	207
		Mayan Sun	208	211
		Cherry Rose	212	215
		Flesh Pink	216	219
		Skeleton Exotic Sangria	220	223
		Amber	224	255
8	Strobe	Open	0	9
		0-20Hz	10	255
9	Zoom	Zoom 0-100%	0	255
10	Dimmer Curve	No Function	0	5
		Linear	6	55
		Square Law	106	155
		Inv.Square Law	192	255
11	Frequency	No Function	0	10
		600Hz	11	59
		1200Hz	60	108
		2400Hz	109	157

12-Channel mode

Channel	Name	Function	Min DMX	Max DMX
11	Frequency	4800Hz	158	206
		9600Hz	207	255
12	Fan Speed	No Function	0	15
		Auto	16	95
		Full	96	175
		Silent	176	255

17-Channel mode

Channel	Name	Function	Min DMX	Max DMX
1	Dimmer	Dimmer 0-100 %	0	255
2	Dimmer Fine	Dimmer Fine 0-100 %	0	255
3	Red	Red 0-100%	0	255
4	Red Fine	Red Fine 0-100%	0	255
5	Green	Green 0-100%	0	255
6	Green Fine	Green Fine 0-100%	0	255
7	Blue	Blue 0-100%	0	255
8	Blue Fine	Blue Fine 0-100%	0	255
9	White	White 0-100%	0	255
10	White Fine	White Fine 0-100%	0	255
11	CCT	NO CCT	0	24
		2500K	25	44
		3000K	45	65
		3500K	66	86
		4000K	87	107
		4500K	108	128
		5000K	129	149

17-Channel mode

Channel	Name	Function	Min DMX	Max DMX
11	CCT	6000K	150	170
		7000K	171	191
		8000K	192	212
		9000K	213	233
		10000K	234	255
12	Colour Macro	Colour OFF	0	19
		Red	20	23
		Green	24	27
		Blue	28	31
		Yellow	32	35
		Cyan	36	39
		Magenta	40	43
		White	44	47
		Orange	48	51
		Pink	52	55
		Violet	56	59
		Aquamarine	60	63
		Sky Blue	64	67
		Full White	68	71
		Cool White	72	75
		Warm White	76	79
		White 3200K	80	83
		White 2500K	84	87
		Yellow 2	88	91
		Straw	92	95
Orange 2	96	99		
Light Rose	100	103		
Dark Pink	104	107		
Magenta 2	108	111		

17-Channel mode

Channel	Name	Function	Min DMX	Max DMX
12	Colour Macro	Blue 2	112	115
		Med Blue Green	116	119
		Dark Blue	120	123
		Bright Pink	124	127
		Medium Blue	128	131
		Golden Amber	132	135
		Deep Golden Amber	136	139
		Pale Lavender	140	143
		Apricot	144	147
		Dark Lavender	148	151
		Chocolate	152	155
		Just Blue	156	159
		Surprise Pink	160	163
		Scarlet	164	167
		Surprise Peach	168	171
		Fire	172	175
		English Rose	176	179
		Mauve	180	183
		Bright Blue	184	187
		Alice Blue	188	191
		Rose Indigo	192	195
		Urban Blue	196	199
		Cool Blue	200	203
		Light Salmon	204	207
		Mayan Sun	208	211
		Cherry Rose	212	215
		Flesh Pink	216	219
		Skeleton Exotic Sangria	220	223

17-Channel mode

Channel	Name	Function	Min DMX	Max DMX
12	Colour Macro	Amber	224	255
13	Strobe	Open	0	9
		0-20Hz	10	255
14	Zoom	Zoom 0-100%	0	255
15	Dimmer Curve	No Function	0	5
		Linear	6	55
		Square Law	106	155
		Inv.Square Law	192	255
16	Frequency	No Function	0	10
		600Hz	11	59
		1200Hz	60	108
		2400Hz	109	157
		4800Hz	158	206
		9600Hz	207	255
17	Fan Speed	No Function	0	15
		Auto	16	95
		Full	96	175
		Silent	176	255